

#Jenny



Finally I get this ebook, thanks for all these I can get now!

#Rio



Cool! I'am really happy

#Markus Jensen



I did not think that this would work, my best friend showed me this website, and it does! I get my most wanted eBook

#Hun Tsu



wtf this great ebook for free?!

#Che Salsa



My friends are so mad that they do not know how I have all the high quality ebook which they do not!

#Diego Butler



so many fake sites. this is the first one which worked! Many thanks

Dayton Operating Instructions and Parts Manual

Dayton Diesel Electric Generator

Assembly (continued)

INSTALL THE BATTERY (5) OPERATIONS

 
 
 
1. Connect battery to generator by battery hold-down system. This system consists of the battery mounting bracket, back bolt, and nut (see Figure 12).

Figure 12 - Battery Hold-Down System

2. Locate the red, positive (+) battery cable from starter solenoid. Connect it to the positive (+) battery terminal (see Figure 13).

3. Locate the black, negative (-) battery cable attached to engine block. Connect it to the negative (-) battery terminal (see Figure 13).

4. Check battery before starting engine. Make sure full tank of oil. Make sure battery is charged. See engine owner's manual for more information.



OPERATIONS

CHECKING OIL LEVEL AND ADDING OIL

Follow steps below to check oil level. Make sure engine is level and stopped.

1. Remove dipstick (see Figure 14). Wipe dipstick clean.
2. Insert dipstick into oil filler neck. Do not touch the oil level marked on top of filler neck. Oil should cover most of dipstick.
3. If level is low, fill to top of oil filler neck (see Figure 14). Use proper filler oil to prevent poor engine.

 


Figure 14 - Checking Oil Level

[Download PDF version of :](#)
[Dayton Generator Manuals](#)